

Telephone:
Fax:
UST-IdNr.:

System operation

- Alarm system can be deactivated by turning the ignition switch to position I.
- Some models:
 - Pressing key unlock button once deactivates system and unlocks driver's door and fuel flap.
 - Pressing key unlock button twice deactivates system and unlocks all doors and boot.
 - System will automatically lock all doors when vehicle is driven above 10 mph (15 km/h).
 - If vehicle unlocked and doors or boot/tailgate not opened within 1 minute, locks are reactivated.
- Alarm/central locking functions can be altered using diagnostic equipment.

Synchronization

- Turn ignition switch to position II.
- Turn ignition switch to position 0 and remove key.
- Within 1 minute:
 - Press and hold key lock button.
 - Press unlock button 5 times.
- Remote control should now operate system.
- If not: Repeat procedure.

Programming

When

- Key remote control added or replaced.
- System malfunction.

How

- Keys can only be programmed using diagnostic equipment.